


# How to Calibrate a Thermometer


## STEP 1

Fill a large container with crushed ice.  
Add clean tap water until the container is full.

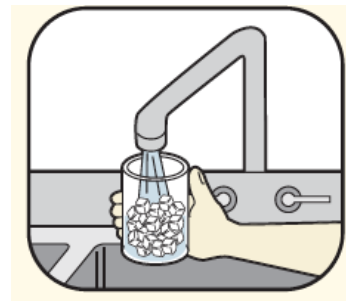

## STEP 2

Put the thermometer stem or probe into the ice water so that the sensing area is completely submerged.  
Wait thirty (30) seconds or until the indicator stops moving.

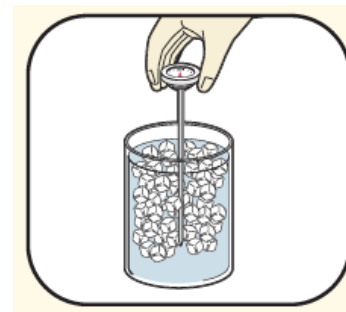

## STEP 3

Hold the calibration nut securely with a wrench or other tool and rotate the head of the thermometer until it reads 32°F (0°C).

